



Full Circle, MAIN/DRIVE NOZZLE SET

Installation Instructions


Step 1 REMOVE OLD NOZZLES

Remove old plastic MIDRANGE (right) and CLOSE-IN (left) from nozzle base.

Step 2 INSTALL NEW NOZZLES

Snap in **MIDRANGE** (right) FCI nozzle with proper orientation.

Snap in *CLOSE-IN* (left) FCI nozzle with proper orientation.

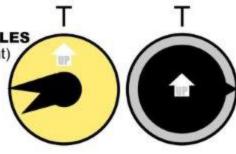

Step 3

RE-INSTALL NOZZLE BASE

in conversion assembly with cap.

www.underhill.us 1-866-UNDERHILL